



## 9. Roof Spoiler

### A: REMOVAL

- 1) Remove the rear gate upper trim. <Ref. to EI-53, REMOVAL, Rear Gate Trim.>
- 2) Disconnect the connector of high-mounted stop light.
- 3) Remove the nut and bolt.

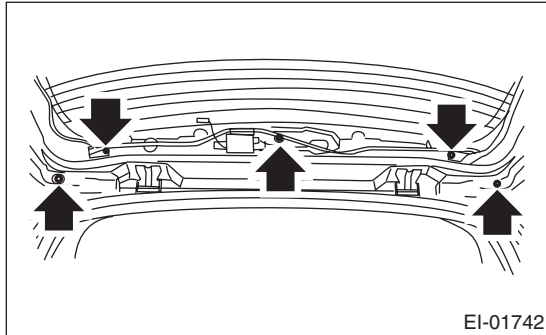

- 4) Remove the clips, and remove the roof spoiler.

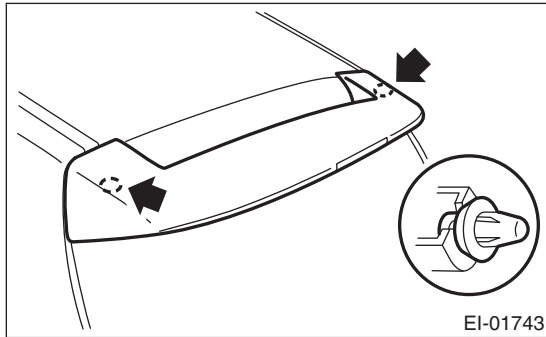

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**4.5 N·m (0.46 kgf-m, 3.32 ft-lb)**